

UPDATE

Additional 23-inch and 26-inch LCD TV Features

Additional features

Your 23-inch and 26-inch LCD TV have additional features for:

- PIP and POP mode
- Key Lockout mode

PIP and POP mode

There are two additional features that can be accessed with your LCD TV remote control.

- Press the **AUDIO** button on your remote control when PIP or POP mode is activated to swap the audio from the main-picture to the sub-picture.
- Press the **INPUT** button on your remote control when PIP or POP mode is activated to change the video source for the sub-picture.

For more information about PIP and POP modes, see the documentation that came with your LCD TV.


Key Lockout mode

Key Lockout mode has been added to your LCD TV Parental Controls. When Key Lockout mode is ON, the **VOL** ◀ and ▶, **CH** ▲ and ▼, **MENU/EXIT**, and **INPUT** buttons on the front of your LCD TV will not work. If you press one of those buttons, the message “**Key Lockout is ON**” appears on the display screen for 10 seconds. The **POWER** button on the front of your LCD TV and the remote control still work normally.

To turn Key Lockout mode ON:

- 1 Press the **MENU** button on the remote control to open the OSD.
- 2 Press the ▲ and ▼ buttons to select the **Setup** menu, then press the **OK** button to open the menu.

- 3 Press the Δ and ∇ buttons to select the **Parental Controls** sub-menu, then press the **OK** button to open the sub-menu.
- 4 Use the number pad to enter your password if prompted. If you have not set a password, enter **0000**. For information about setting a password, see the *Remote Control User Guide* that came with your LCD TV.

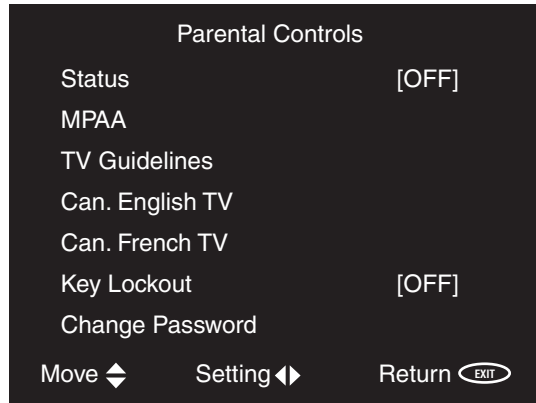

- 5 Press the Δ and ∇ buttons to select the **Key Lockout** option, then press the \triangleright button to turn Key Lockout mode **ON**.
- 6 Press the **EXIT** button when you are finished making changes to this option.



MAN 23/26" LCDTV FMWARE UPD R0 03/04

