



## Warnings

Danger of explosion if battery is incorrectly replaced.

The battery used in this device may present a fire or chemical burn hazard if mishandled. Do not disassemble, heat above 140°F (60°C), or incinerate. Dispose of used battery promptly. Keep away from children.



## Warnings

Replace only with a battery specifically manufactured for your Gateway GCM-4 Photo Jukebox. To discard used batteries, recycle them at your local waste management's household hazardous waste collection site or at a business that accepts used batteries for recycling programs.

Use only with specified charger. Do not short-circuit.