



Setting up your Gateway 30" LCD TV

Gateway®

1 Connect your LCD TV For more connection information, see your TV user guide.

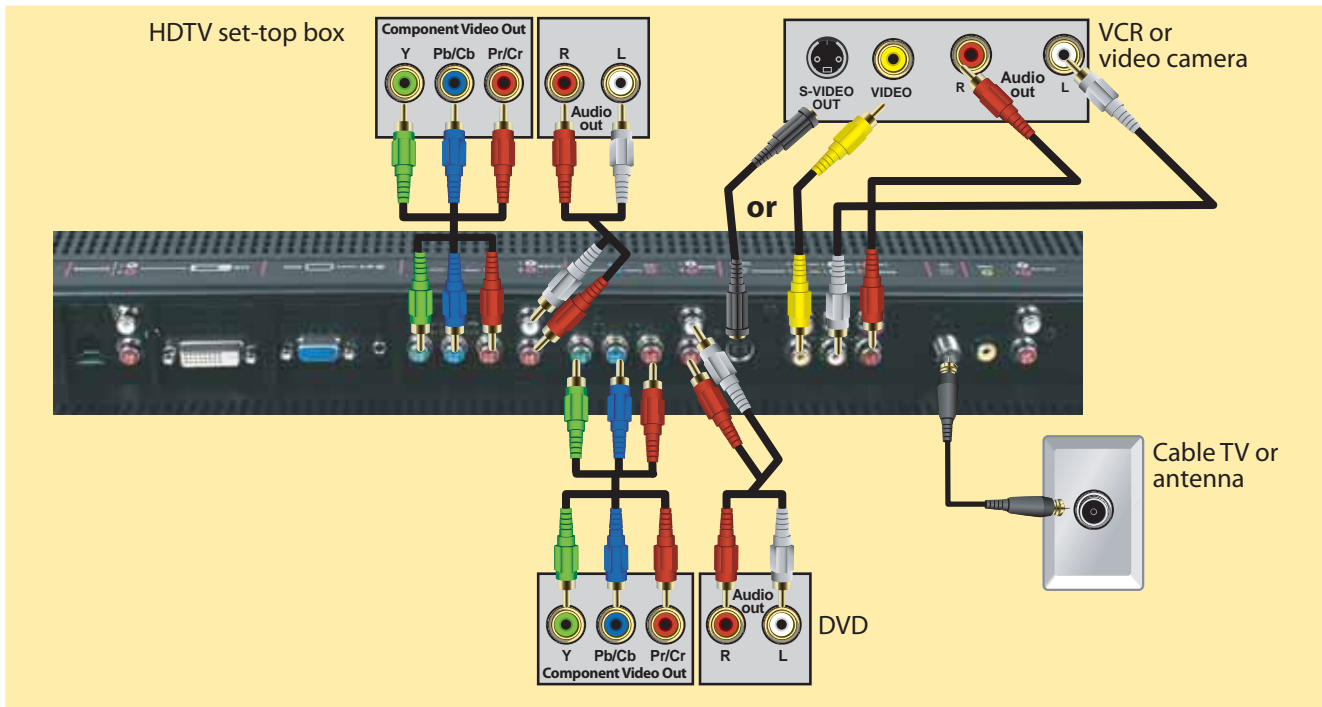

2 Connect your speakers (optional)

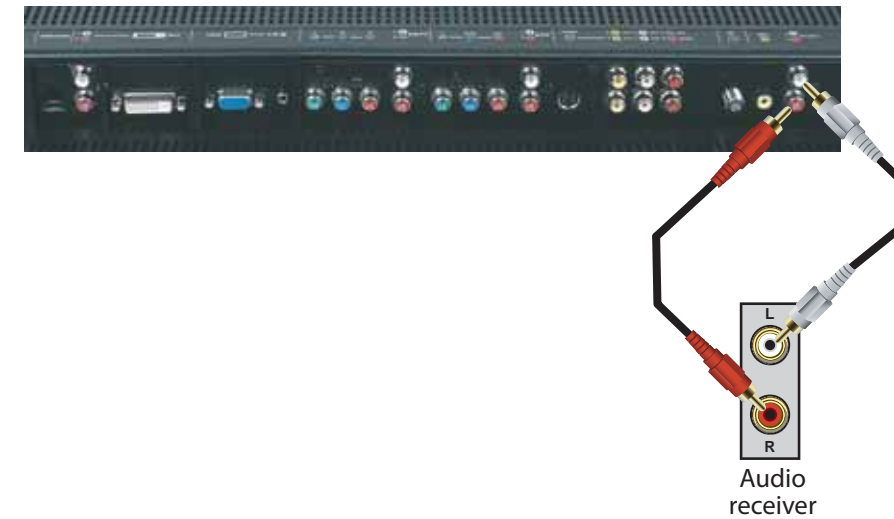

3 Plug in your LCD TV

Connect the power cord to the back of your LCD TV, then plug the other end of the power cord into an outlet.




4 Turn on your LCD TV


Press the **POWER** button on the front of your LCD TV or on the remote control.



Front panel controls

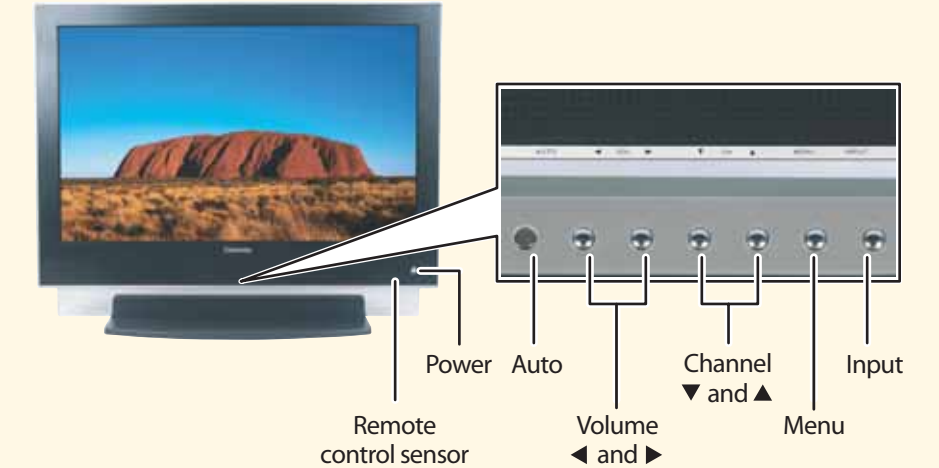

Back panel connections

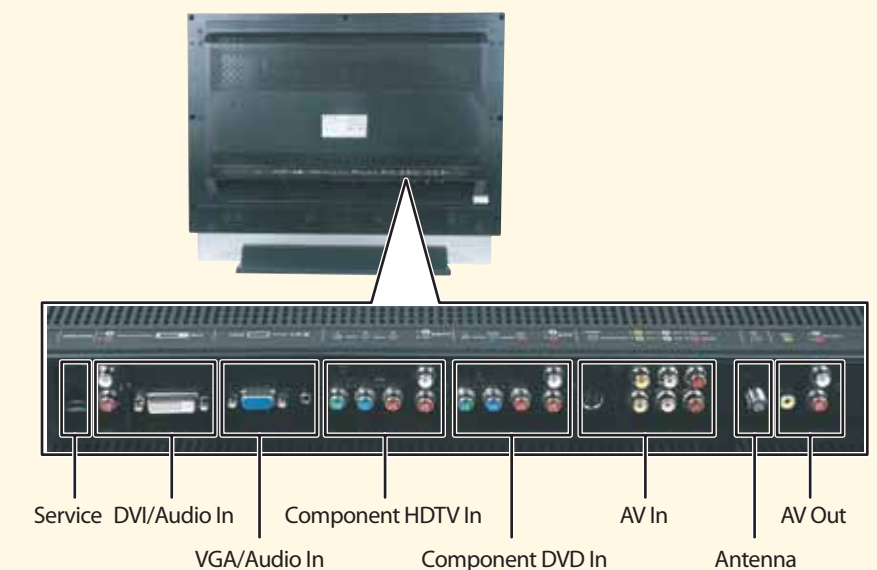

WARNING! To prevent electrical shock, unplug your LCD TV before connecting any external components.

WARNING! For added protection during a lightning storm or when your LCD TV is left unattended for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system.

NEED MORE HELP OR ACCESS TO ADVANCED SETTINGS?
See the documentation that came with your LCD TV.